




NO LOAD

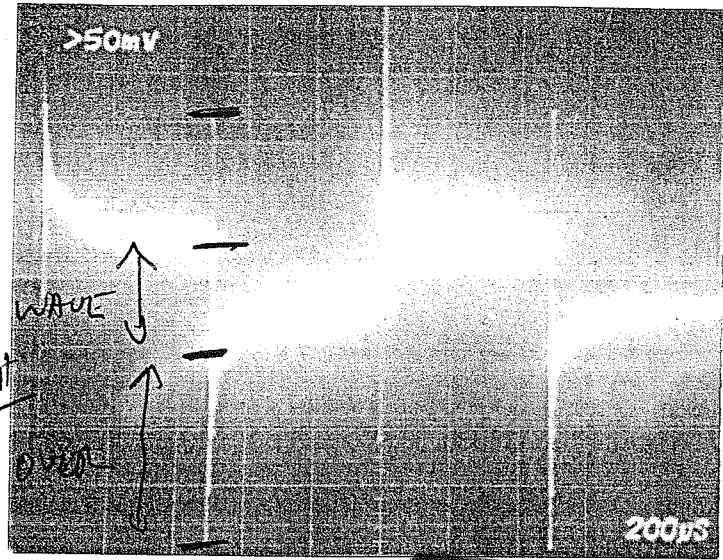


NO LOAD

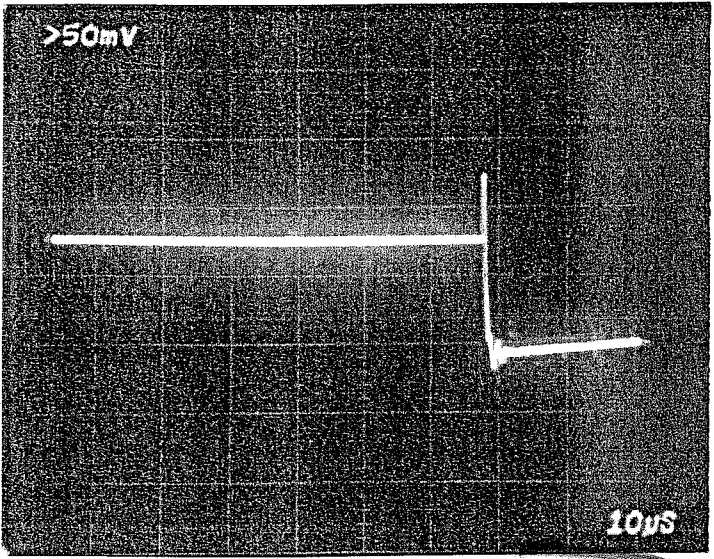

Close up w/ 1K LOAD

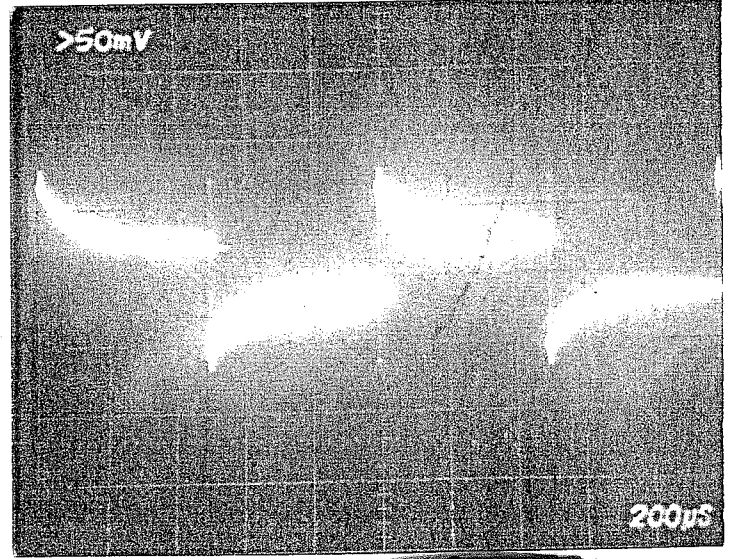

1K LOAD

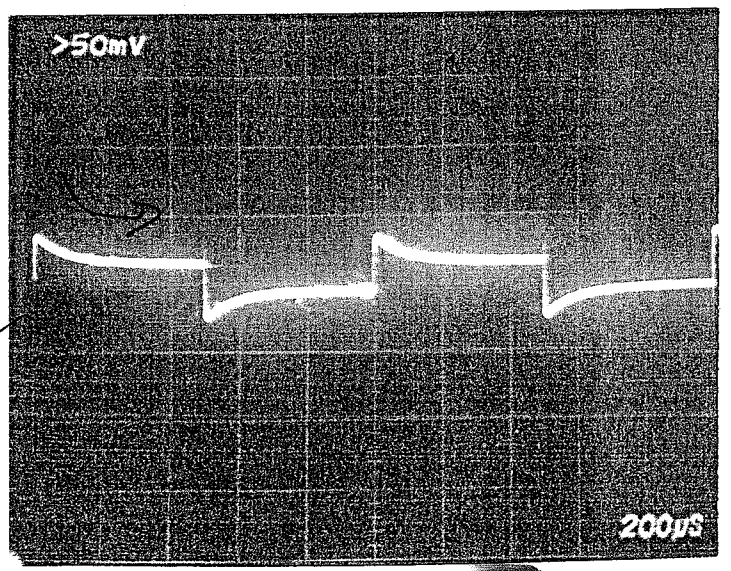


100Ω LOAD


~~_____~~ transfer only
 w/ 1KHz square wave
 Alling top at
 square wave indicates
 poor low frequency response
 Notice even
 with 100Ω load it
 is underdamped

~~_____~~
 - to ~~_____~~


FROM SCOTT DORSEY

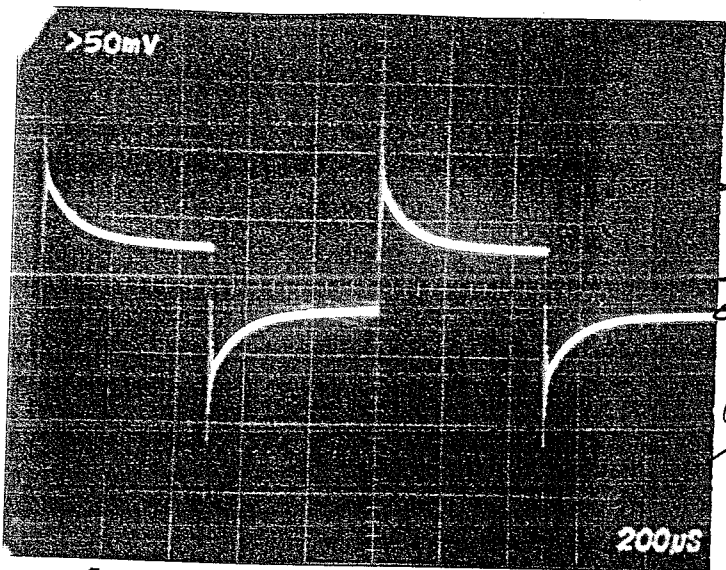


NO LOAD

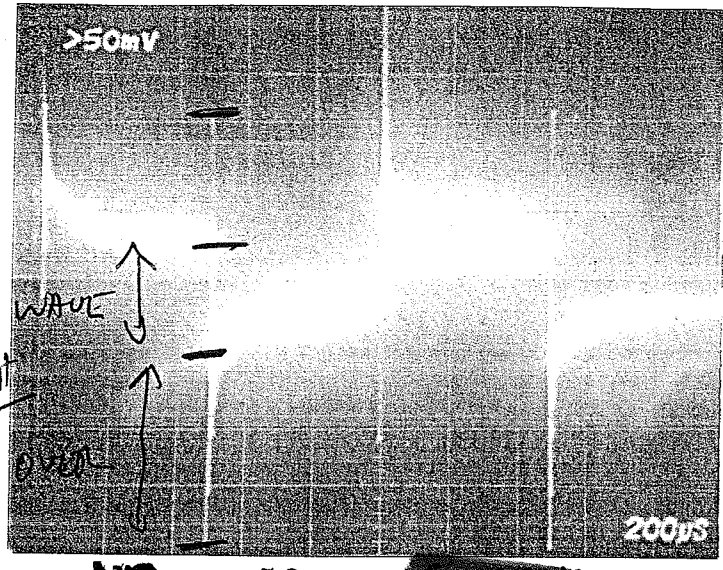


NO LOAD

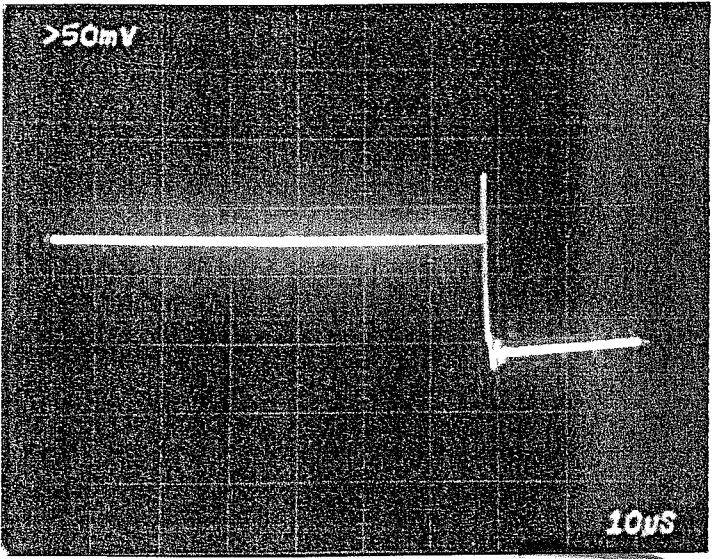

Close up w/ 1K LOAD

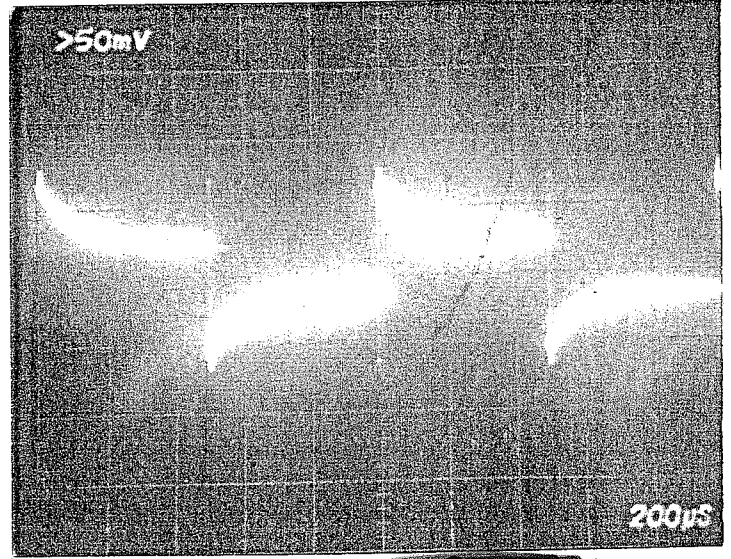

1K LOAD

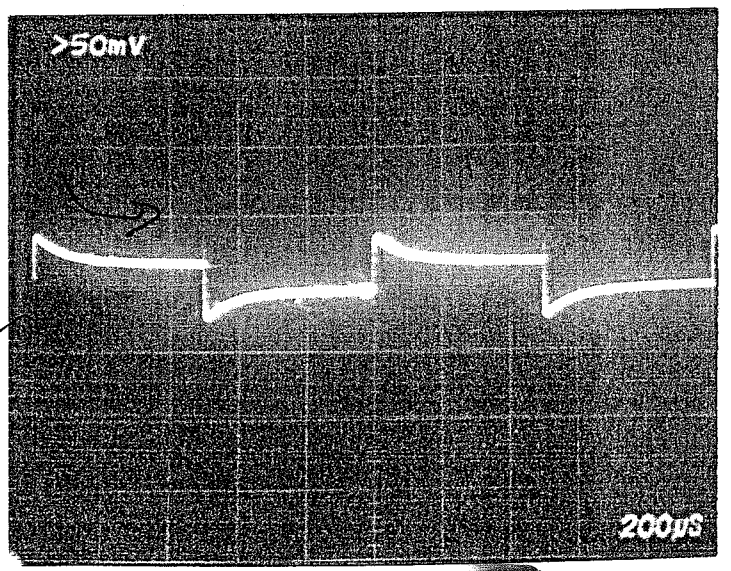

100Ω LOAD

transfer only
 w/ 1KHz square wave
 Alling top at
 square wave indicates
 poor low frequency response
 Notice even
 with 100Ω load it
 is underdamped

FROM SCOTT DORSEY